

MODERN, STYLISH, QUALITY,  
CONTEMPORARY & AFFORDABLE

☎ 01926 754062  
✉ sales@modernglazing.co.uk  
🌐 www.modernglazing.co.uk



## WINDOW MEASURING SHEET

A diagram of a window frame with three horizontal measurement lines and three vertical measurement lines. The horizontal lines are labeled 'Top width', 'Middle width', and 'Bottom width' on the right. The vertical lines are labeled 'Left height', 'Middle height', and 'Right height' at the bottom. Each measurement is followed by a box for the value and 'mm'.

Top width  mm

Middle width  mm

Bottom width  mm

Left height  mm Middle height  mm Right height  mm


Smallest width  mm - 10mm = Order width  mm, to be used on the website.

Smallest height  mm - 10mm = Order height  mm, to be used on the website.

### SUMMARY GUIDE (more information and video on [www.modernglazing.co.uk](http://www.modernglazing.co.uk))

- Measure your window from the outside of the property.
- Always measure in millimetres (mm).
- Measure your door in mm from the outside of the property.
- Measure the brickwork opening in 3 places for both width and height.
- The height measurements must be from underneath of any existing removable cill if you are removing
- If your property is rendered, remove some render and measure to the brickwork edge.

**Please note: We are unable to accept responsibility for incorrect measurements. If you are unsure we recommend that you consult a professional installer/builder.**

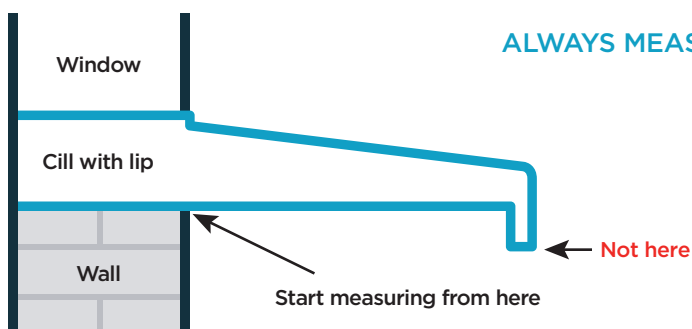

**ALWAYS MEASURE FROM UNDER ANY EXISTING REMOVABLE CILL  
UNLESS YOU ARE KEEPING THE EXISTING**

**MODERN, STYLISH, QUALITY,  
CONTEMPORARY & AFFORDABLE**

☎ 01926 754062  
✉ sales@modernglazing.co.uk  
🌐 www.modernglazing.co.uk



**PLEASE TICK RELEVANT BOXES AND FILL OUT FORM FOR ORDER**

Window colour      Outside \_\_\_\_\_ Inside \_\_\_\_\_


Trickle vents required      Y ☐      N ☐

Handle colour \_\_\_\_\_

Height from floor to window inside \_\_\_\_\_ *If below 800 glass must be toughened*

Sketch of window with openers viewed from outside. *(More information can be found on site about opening options)*

*Example*

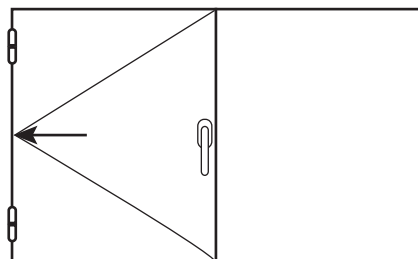

Point to hinge side

*Your window*

Cill depth-      85mm (stub cill) ☐      150mm ☐      180mm ☐

Glass style - *(More information can be found on site about glass styles)*

Clear ☐      obs ☐

## KEY POINTS TO CONSIDER WHEN MEASURING:

- Please Note that Aluminium cills are 25mm compared to PVC cills which are 30mm
- Arrows on the windows point to where the hinges are. (the side where the arrow touches in the middle are hinges). Make sure you order the window hinged the correct way.
- Everything is ordered viewed from the Outside!
- How will the frame look internally against the plaster. This is most important for ripping out existing doors and windows. If you are taking out an existing timber frame then you must make sure the new frame will not be hidden in the plaster. This can be accounted for by adding knock on to the sides. Pvc doors normally require a knock on to be added on the hinge side and is always advised!
- Opening windows - First thing to think of is being able to reach the handles. For example If the kitchen sink is in the way would it be better if the window was hinged at the top so the handle is at the bottom rather than the side. Also if you are having fascia and soffits done make sure they wont be in the way of the windows opening. A 15mm knock on can be added to the head in order to bring the top of the casement lower.
- With the previous point it is important to check the cill depth of the window coming out too..
- If in doubt contact us or a professional for further assistance